



杰美康机电  
JUST MOTION CONTROL

# 3DM783

## Digital Stepper Drive

---

# Manual



Shenzhen **Just Motion Control** Electro-mechanics Co., Ltd

TEL:+86-0755-26509689

FAX:+86-0755-26509289

[www.jmc-motion.com](http://www.jmc-motion.com)

Email:[info@jmc-motion.com](mailto:info@jmc-motion.com)

Address: Floor2, Building A, Hongwei Industrial Zone No.6,

Liuxian 3rd Road, Shenzhen. China

Thanks for selecting JMC stepper motor driver. We hope that the superior performance, outstanding quality, excellent cost performance of our product can help you accomplish your motion control project.

The content in this manual has been carefully prepared and is believed to be accurate, but no responsibility is assumed for inaccuracies.

All the contents of this manual, copyright is owned by the Shenzhen JUST MOTION CONTROL electromechanical Co., Ltd. Without JMC permission, no unit or individual is allowed to copy.

Shenzhen Just Motion Control  
Electro-mechanics Co., Ltd

Version	Editor	Verifier
V1.0	R&D	R&D

## Contents

<b>1. Overview</b> .....	- 4 -
<b>2. Features</b> .....	- 4 -
<b>3. Ports Introduction</b> .....	- 5 -
3.1 Control Signal Input Ports.....	- 5 -
3.2 Power Interface Ports.....	- 6 -
<b>4. Technological Index</b> .....	- 7 -
<b>5. Connections to Control Signal</b> .....	- 8 -
5.1 Connections to Common Anode.....	- 8 -
5.2 Connections to Common Cathode.....	- 8 -
5.3 Connections to Differential Signal.....	- 9 -
5.4 Connections to 232 Serial Communication Interface.....	- 10 -
5.5 Sequence Chart of Control Signals.....	- 11 -
<b>6. DIP Switch Setting</b> .....	- 12 -
6.1 Current Setting.....	- 12 -
6.2 Standstill current Setting.....	- 12 -
6.3 Micro steps Setting.....	- 13 -
<b>7. Faults alarm and LED flicker frequency</b> .....	- 14 -
<b>8. Appearance and Installation Dimensions(mm)</b> .....	- 15 -
<b>9. Typical Connection</b> .....	- 15 -
<b>10. Parameter Setting</b> .....	- 16 -
<b>11. Processing Methods to Common Problems and Faults</b> .....	- 22 -
11.1 Power on power light off.....	- 22 -
11.2 Power on red alarm light on.....	- 22 -
11.4 After input pulse signal but the motor not running.....	- 23 -

## 1. Overview

The 3DM783 is a three phase digital stepper driver based on DSP. Its Micro step resolutions and output current are programmable. And it has advanced control algorithm, which can brings a unique level of system smoothness, provides optimum torque and mid-range instability. The control algorithm of Multi-Stepping can make stepper motor has smooth system performance. The control algorithm of torque compensation can improve the torque of motor in the high speed. The control algorithm of motor self-test and parameter auto-setup technology offers optimum responses with different motors and easy-to-use. The control algorithm of smoothness can enhance the acceleration and deceleration of motor. Its unique features make the 3DM783 to be an ideal solution for applications.


## 2. Features

- ◆ Parameter auto-setup and motor self-test
- ◆ Multi-Stepping inside
- ◆ Small noise, low heating, smooth movement
- ◆ Torque compensation in high speed
- ◆ Variable current control technology, High current efficiency
- ◆ Accelerate and decelerate control inside, Great improvement in smoothness of starting or stopping the motor

- ◆ Support PUL/DIR and CW/CCW modes
- ◆ Storage the position of motor
- ◆ Optically isolated input and compatible with 5V or 24V
- ◆ User-defined micro steps
- ◆ Micro-step resolutions and Output current programmable
- ◆ Over current, over voltage and low voltage protection
- ◆ Green light means running while red light means protection or off line

### 3. Ports Introduction


#### 3.1 Control Signal Input Ports

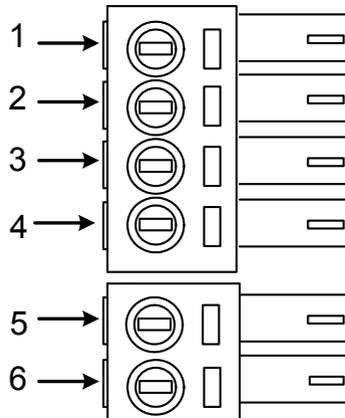

Port	Symbol	Name	Remark
1	PLS+	Pulse signal +	Compatible with 5V or 24V
2	PLS-	Pulse signal -	

3	DIR+	Direction signal+	Compatible with 5V or 24V
4	DIR-	Direction signal-	
5	ENA+	Enable signal +	Compatible with 5V or 24V
6	ENA-	Enable signal-	

### 3.2 Power Interface Ports

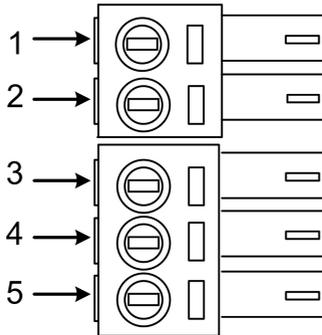


1	Power Input Ports	GND	Input Power-	DC24V~70V
2		+V	Input Power +	
3	Motor Phase	U	Phase U	
4	Wire Input	V	Phase V	
5	Ports	W	Phase W	

## 4. Technological Index

Input Voltage		DC24V-70V
Pulse Frequency max		200K
Communication rate		57.6Kbps
Over voltage value		DC 85V
Overall Dimensions (mm)		118×75.5×34
Weight		Approximate 260g
Environment Specifications	Environment	Avoid dust, oil fog and corrosive gases
	Operating Temperature	+70°C Max
	Storage Temperature	-20°C~+80°C
	Humidity	40~90%RH
	Cooling method	Natural cooling or forced air cooling

## 5. Connections to Control Signal


### 5.1 Connections to Common Anode

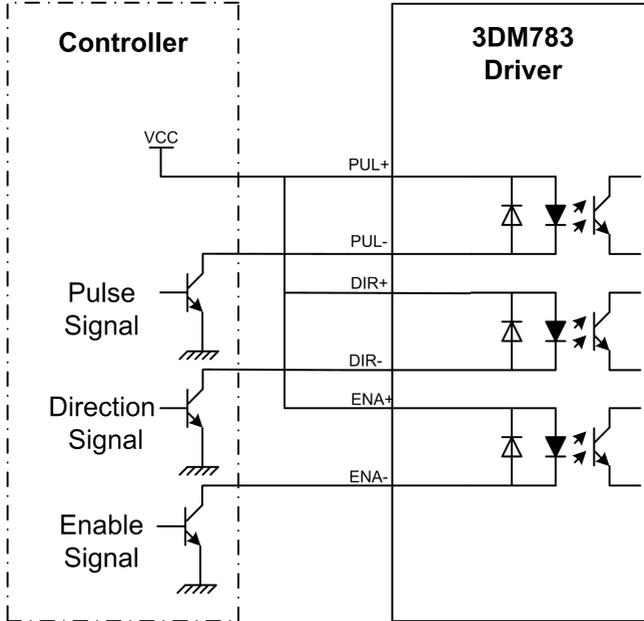

**Remark:**

VCC is compatible with 5V or 24V.


### 5.2 Connections to Common Cathode

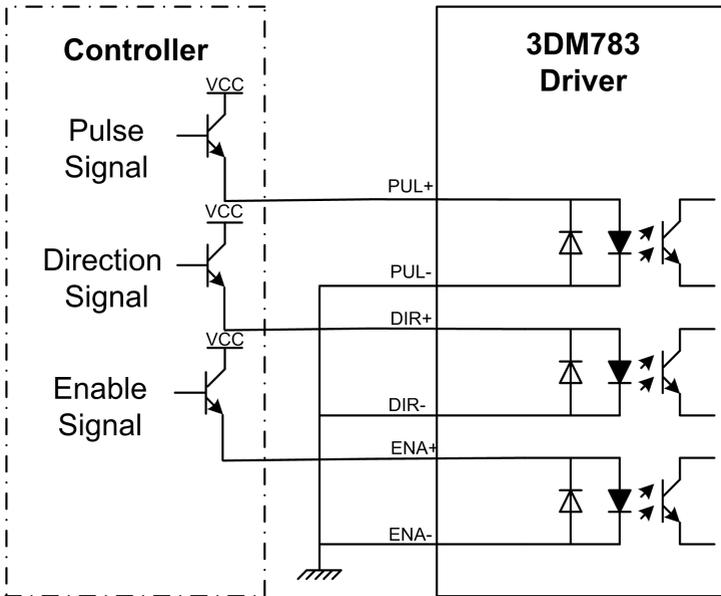

**Remark:**

VCC is compatible with 5V or 24V.


### 5.3 Connections to Differential Signal

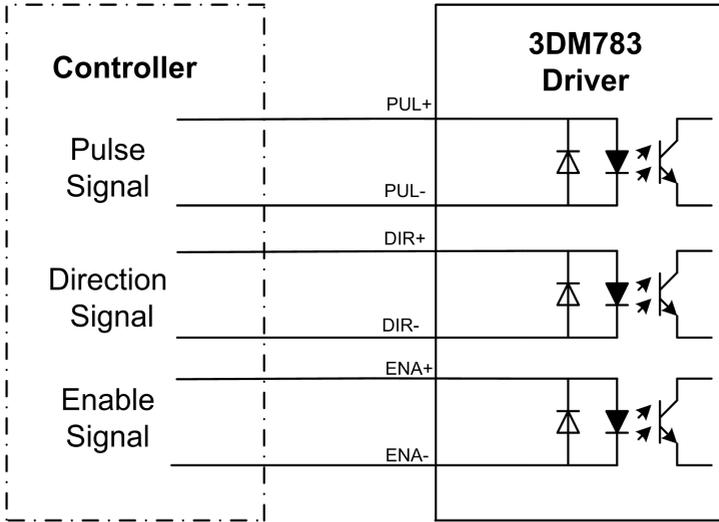

**Remark:**

VCC is compatible with 5V or 24V.

**5.4 Connections to 232 Serial Communication Interface**

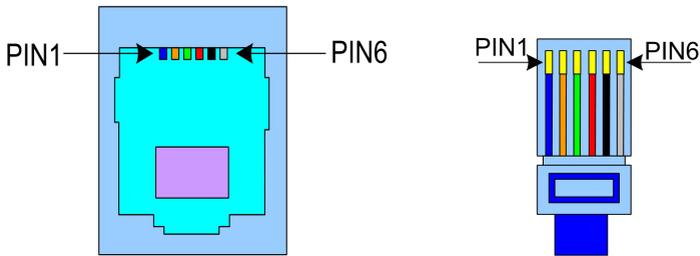


Crystal Head foot	Definition	Remark

1	TXD	Transmit Data
2	RXD	Receive Data
4	+5V	Power Supply to HISU
6	GND	Power Ground

### 5.5 Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA should abide by some rules, shown as following diagram:

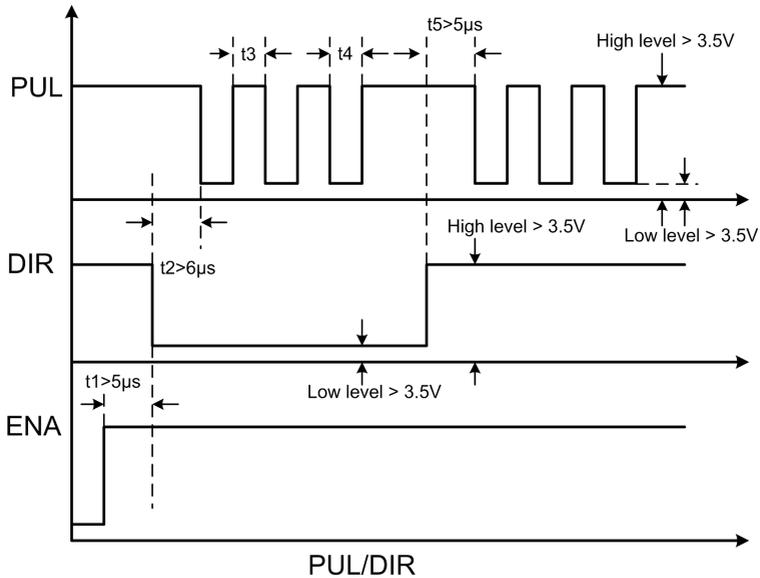

**Remark:**

- a.  $t_1$ : ENA must be ahead of DIR by at least  $5\mu s$ . Usually, ENA+ and ENA- are NC (not connected).
- b.  $t_2$ : DIR must be ahead of PUL active edge by  $6\mu s$  to ensure correct direction;

- c. t3: Pulse width not less than  $2.5 \mu\text{s}$ ;  
 d. t4: Low level width not less than  $2.5 \mu\text{s}$ .

## 6. DIP Switch Setting

### 6.1 Current Setting

The current setting is in the following table.

Dial switch Current		SW1	SW2	SW3
2. 1A	1. 5A	0	0	0
3. 15A	2. 25A	1	0	0
4. 03A	2. 88A	0	1	0
4. 78A	3. 42A	1	1	0
5. 69A	4. 06A	0	0	1
6. 44A	4. 60A	1	0	1
7. 35A	5. 25A	0	1	1
8. 4A	6. 0A	1	1	1

### 6.2 Standstill current Setting

SW4 is used for setting the standstill current , “off” means the standstill current is set to be half of the selected dynamic current or other current, which can be set by the HISU, the details can be seen in the tenth

sections. While “on” means the standstill current is set to be the same as the selected dynamic current.


### 6.3 Micro steps Setting

The micro steps setting is in the following table. And the micro steps can be also setting through the HISU. The details can be seen in the tenth sections.

Dial witch Micro steps	SW5	SW6	SW7	SW8
400	1	1	1	1
800	0	1	1	1
1600	1	0	1	1
3200	0	0	1	1
6400	1	1	0	1
12800	0	1	0	1
25600	1	0	0	1
51200	0	0	0	1
1000	1	1	1	0
2000	0	1	1	0
4000	1	0	1	0
5000	0	0	1	0
8000	1	1	0	0


10000	0	1	0	0
20000	1	0	0	0
40000	0	0	0	0

### 7. Faults alarm and LED flicker frequency

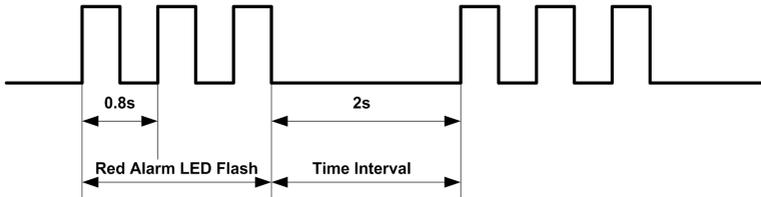


Flicker Frequency	Description to the Faults
1	Error occurs when the motor coil current exceeds the drive's current limit.
2	Voltage reference error in the drive
3	Parameters upload error in the drive
4	Error occurs when the input voltage exceeds the drive's voltage limit.

### 8. Appearance and Installation Dimensions(mm)

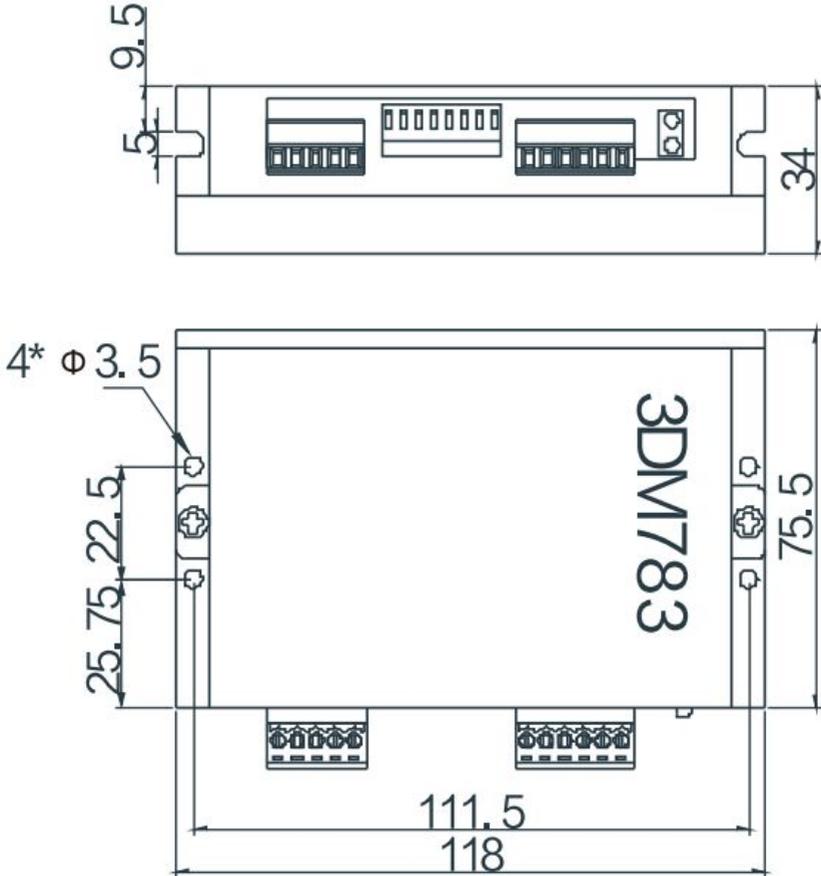

### 9. Typical Connection

Here is the typical connection of 3DM783.

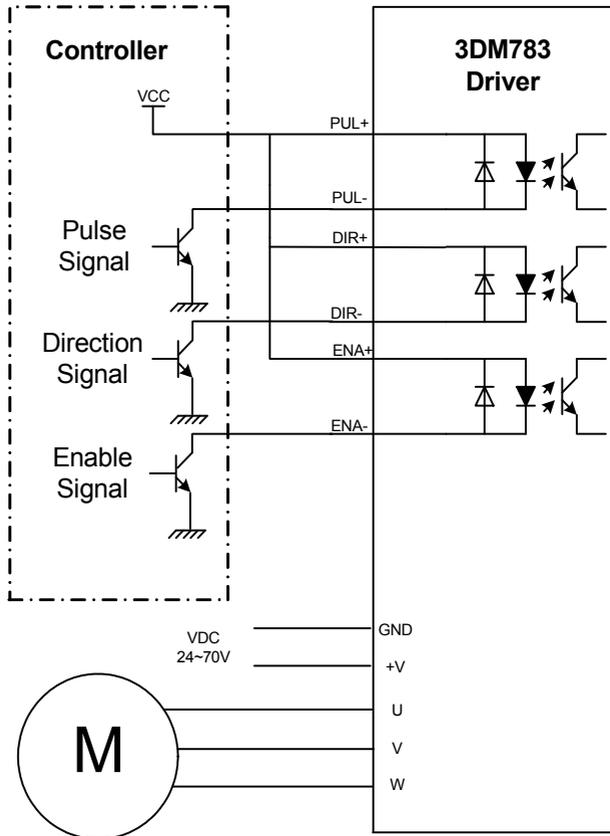

## 10. Parameter Setting

The parameter setting method of 3DM783 drive is to use a HISU adjuster through the 232 serial communication ports, only in this way we can set the parameters we want. There are a set of best default parameters to the corresponding motor which are carefully adjusted by our engineers, users only need refer to the following table, specific condition and set the correct parameters.

Actual value = Set value × the corresponding dimension

Mode	Definition	Range	Dimension	Drive Restart	Default Value
P1	Current loop K <sub>p</sub>	0—4000	1	N	40
P2	Current loop K <sub>i</sub>	0—1000	1	N	110
P3	Damping coefficient	0—500	1	N	270
P4	Amplitude of first resonance point	0—100	1	N	0
P5	Phase of first resonance point	0—100	1	N	0
P6	Amplitude of second resonance point	0—100	1	N	0
P7	Phase of second resonance point	0—100	1	N	0
P8	Amplitude of Third resonance point	0—1000	1	N	0
P9	Phase of Third resonance point	0—1000	1	N	0
P10	Enable signal level	0—1	1	N	0
P11	Edge of the pulse	0—1	1	Y	1
P12	Reserved				
P13	Command Type	0—1	1	Y	0
P14	User-defined micro steps	4—1000	50	Y	0
P15	Time of standstill	0—4000	1ms	Y	800


	current				
<b>P16</b>	Percentage of standstill current	0—100	1	Y	50
<b>P17</b>	Speed smoothness	0—10	1	Y	0
<b>P18</b>	Enable of position memory	0—1	1	Y	0
<b>P19</b>	User-defined inductance of motor	0—1000	mh	Y	0
<b>P20</b>	User-defined resistance of motor	0—100	0.1Ohm	Y	0
<b>P21</b>	Result of position memory(Read only)				
<b>P22</b>	Time of enable position memory	0—100	1s	Y	2
<b>P23</b>	Reserved				
<b>P24</b>	Inductance of motor(Read only)		0.1mh		
<b>P25</b>	Resistance of motor(Read only)		0.1Ohm		

There are total 25 parameter configurations, use the HISU to download the configured parameters to the drive, the detail descriptions to every parameter configuration are as follows:

Item	Description
------	-------------

<p><b>Current loop Kp (P1)</b></p> <p><b>Current loop Ki (P2)</b></p>	<p>The P1 and P2 is used to set Kp and Ki of Current loop at the moment of power-on.</p>
<p><b>Damping coefficient (P3)</b></p>	<p>This parameter is used to change the damping coefficient in case of the desired operating state is under resonance frequency.This parameter is useful in high speed.</p>
<p><b>Amp 1—3 Phase 1—3 (P4,P5,P6,P7,P8, P9)</b></p>	<p>3DM783 Driver provides robust anti-resonance control to stop the vibrations and maintain equilibrium.</p> <p><b>Amp1</b> and <b>Phase1</b> is Phase adjustment for 1st and Amplitude adjustment for 1st resonance area respectively. Usually between 0.6rps and 1.2rps.</p> <p><b>Amp2</b> and <b>Phase2</b> is Phase adjustment for 2nd and Amplitude adjustment for 2nd resonance area respectively. Usually between 1.2rps and 2.4rps.</p> <p><b>Amp3</b> and <b>Phase3</b> is Phase adjustment for 3rd and Amplitude adjustment for 3rd resonance area respectively. Usually between 3rps and 4rps.</p>
<p><b>Enable signal</b></p>	<p>This parameter is set to control the Enable Input</p>

<b>level (P10)</b>	signal level. 0 means low, while 1 means high.
<b>Edge of the pulse (P11)</b>	This parameter is set to choice the edge of the input pulse. 0 means rising edge, while 1 means falling edge.
<b>Command Type (P13)</b>	This parameter is set to choice the PUL/DIR mode or CW/CCW mode. 0 means PUL/DIR mode,while means CW/CCW mode.
<b>User-defined micro steps (P14)</b>	This parameter is set of user-defined micro steps. The actual micro steps = the set value $\times$ 50. For example, if the parameter is 4, the micro steps is $4 \times 50 = 800$ . But if this parameter is 0, which means micro steps is set by the outer DIP switches.
<b>Time of standstill current (P15)</b>	This parameter is set the time when the standstill current is set to be half of the selected dynamic current or other current.
<b>Percentage of standstill current (P16)</b>	This parameter is set the percentage of standstill current.
<b>Speed smoothness (P17)</b>	This parameter is set to control the smoothness of the speed of the motor while acceleration or deceleration, the larger the value, the smoother the speed in acceleration or deceleration.

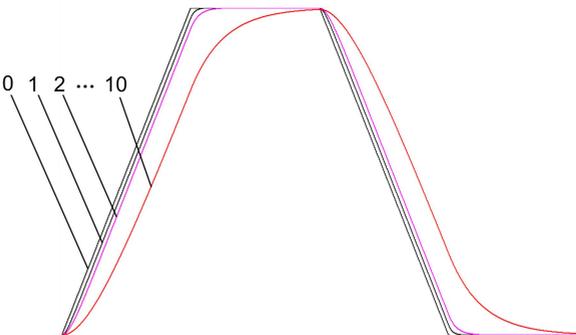	
<p><b>Enable of position memory (P18)</b></p>	<p>This parameter is set to enable the function of position memory. 0 means disable, while 1 means enable. If set 1, the 3DM783 can remember the position of motor in the next time of power on.</p>
<p><b>User-defined inductance of motor (P19)</b></p>	<p>This parameter is set the inductance of motor. 0 means 3DM783 gets the inductance by control algorithm of Parameter auto-setup, while other parameter means 3DM783 gets the inductance through user sets.</p>
<p><b>User-defined resistance of motor (P20)</b></p>	<p>This parameter is set the resistance of motor. 0 means 3DM783 gets the resistance by control algorithm of Parameter auto-setup, while other parameter means 3DM783 gets the resistance through user sets.</p>
<p><b>Result of</b></p>	<p>This parameter is set to control the smoothness of</p>

<b>position memory (P21)</b>	Display the result of position memory
<b>Time of enable position memory (P22)</b>	This parameter is set of the time when enable the position memory. The time is mean the space of time to stop plus input.
<b>P24</b>	This Read Only parameter is used to know the inductance of motor by control algorithm of Parameter auto-setup.
<b>P25</b>	This Read Only parameter is used to know the resistance of motor by control algorithm of Parameter auto-setup.

## 11. Processing Methods to Common Problems and

### Faults

#### 11.1 Power on power light off

- No power input, please check the power supply circuit. The voltage is too low.

#### 11.2 Power on red alarm light on

- Please check the motor is connected with the drive.
- The stepper digital drive is over voltage or under voltage. Please lower or increase the input voltage.

### **11.4 After input pulse signal but the motor not running**

- Please check the input pulse signal wires are connected in reliable way.
- Please make sure the input pulse mode is corresponding with the real input mode.
- The Driver is disabled.